


K75 ABS-10.89

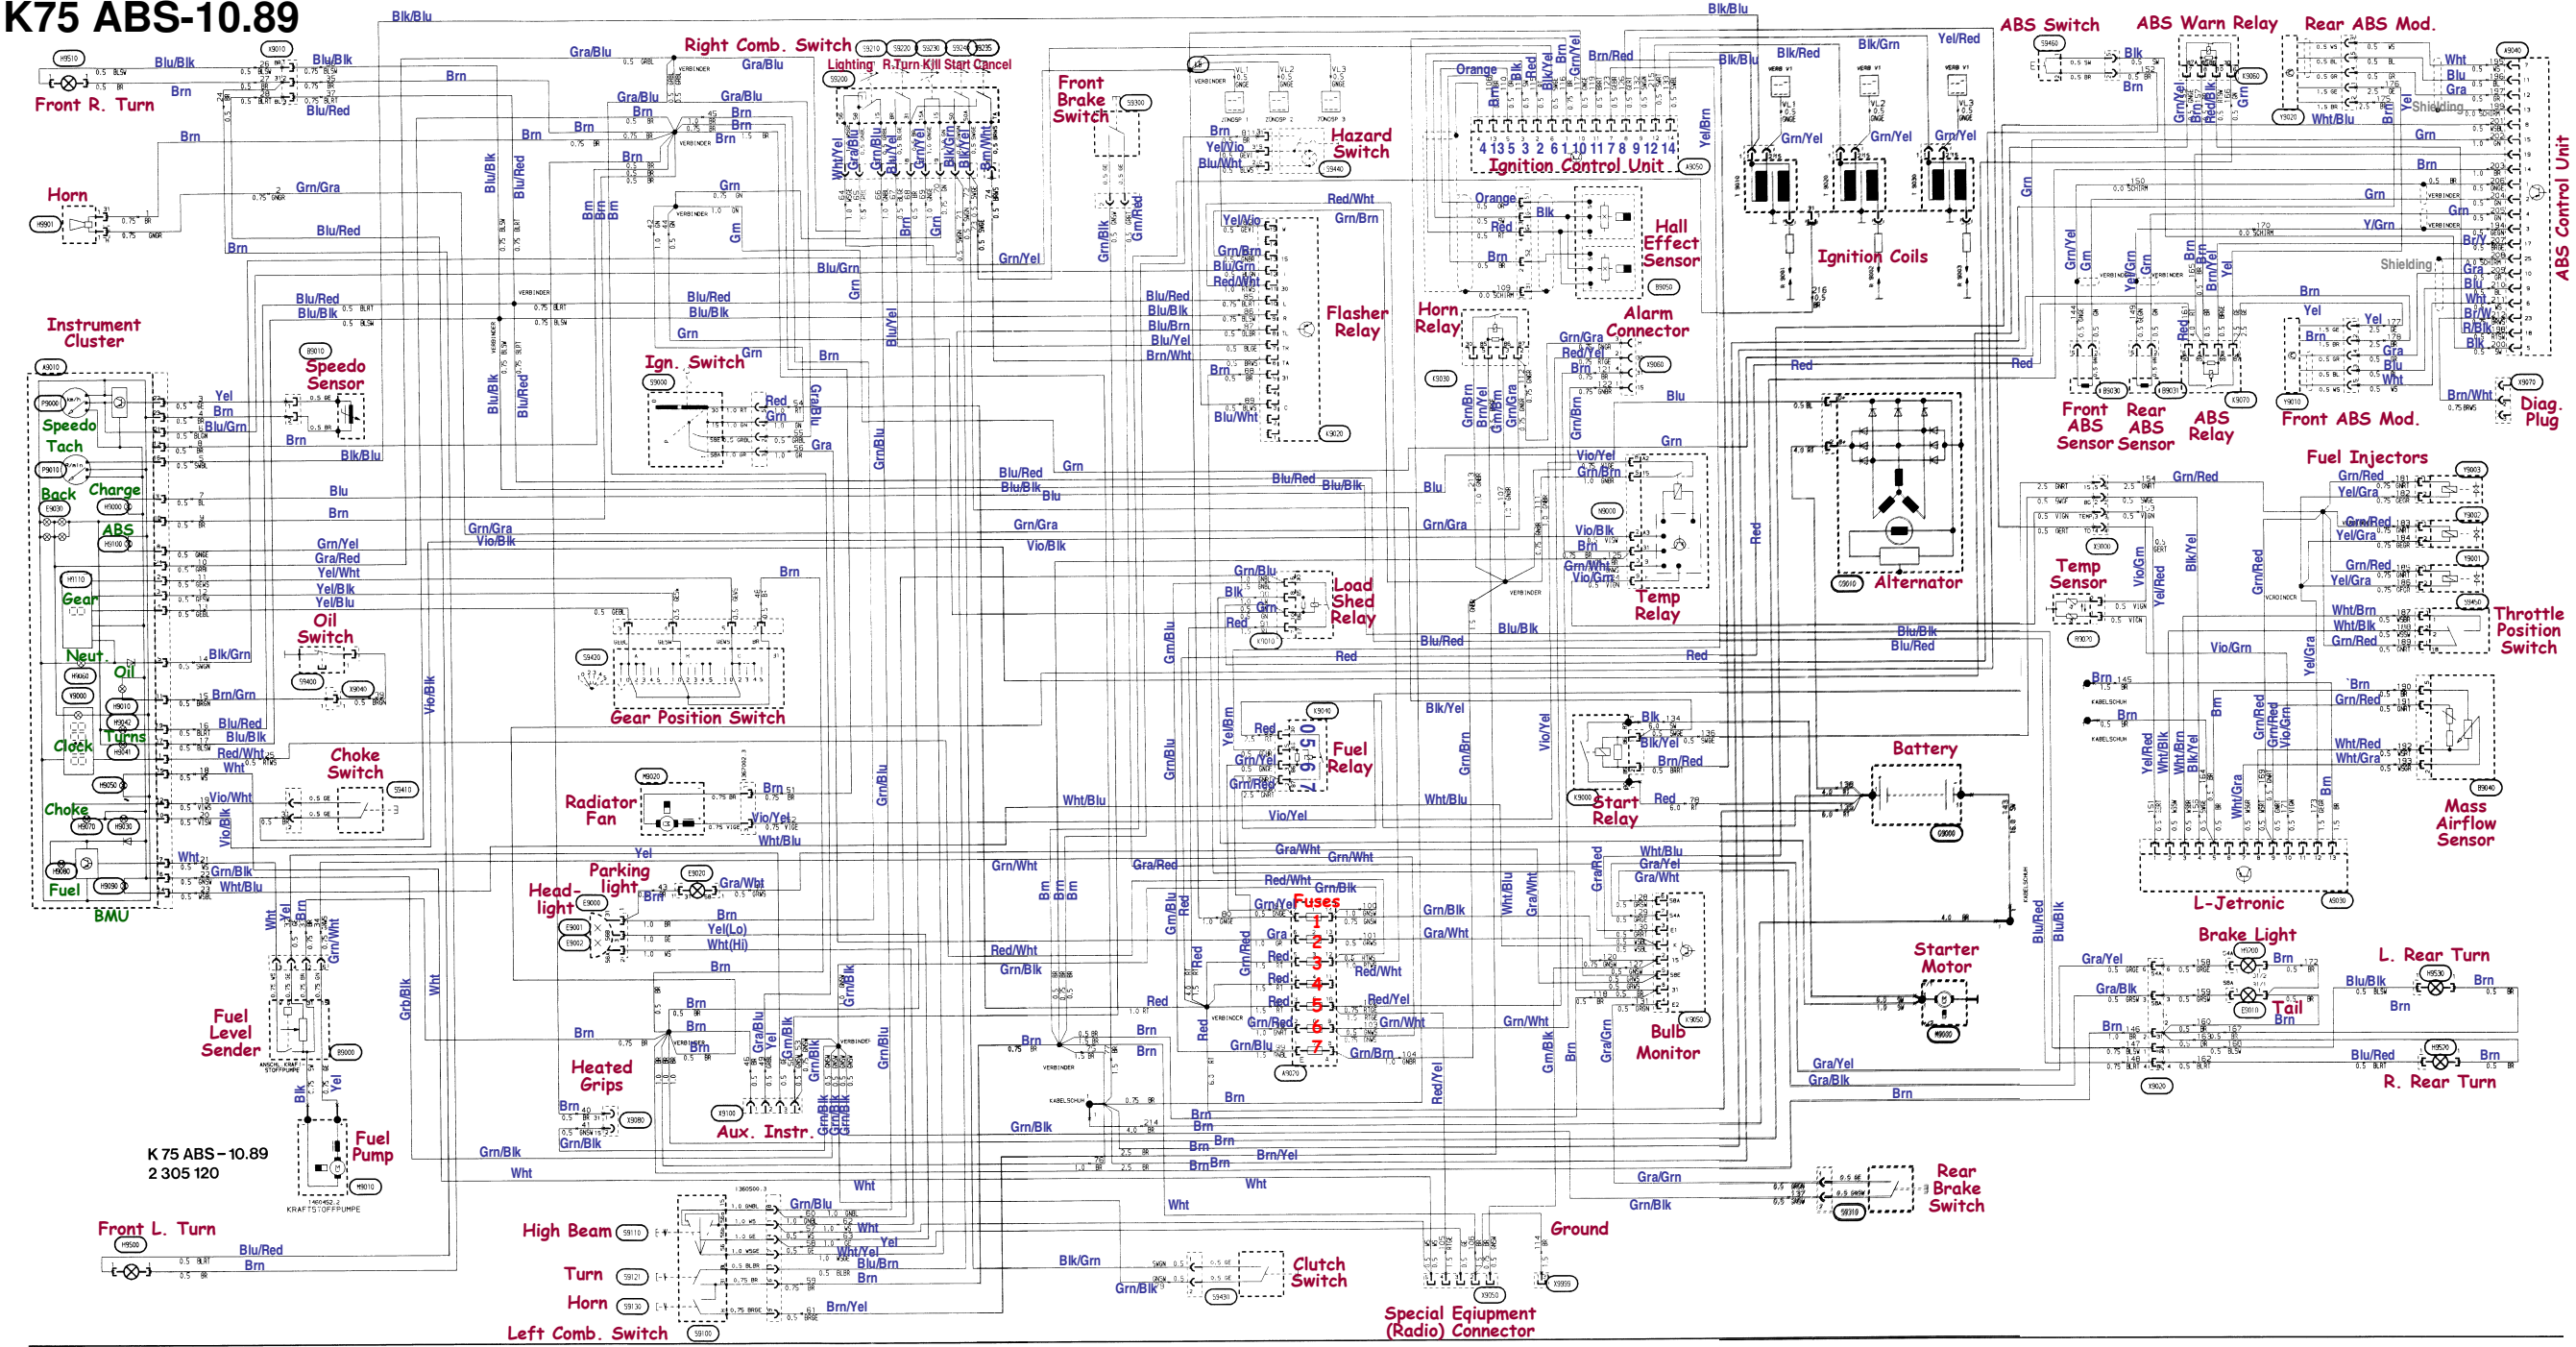

K 75 ABS - 10.89
2 305 120

K75 ABS-10.89 Legend

A9010 Instrument cluster	H9110 Gear indicator	S9240 Starter switch
A9020 Flasher unit	H9200 Brake light	S9300 Brake light switch, hand-operated
A9030 L-Jetronic control unit	H9500 Front left flashing turn indicator	S9310 Brake light switch, foot-operated
A9040 ABS control unit	H9510 Front right flashing turn indicator	S9400 Oil pressure switch
A9050 Ignition control unit	H9520 Rear left flashing turn indicator	S9410 Choke switch with telltale lamp
B9000 Fuel gauge	H9530 Rear right flashing turn indicator	S9420 Transmission switch
B9010 Inductive transmitter	H9901 Horn	S9430 Clutch switch
B9020 Temperature transmitter	K9000 Starter motor relay	S9440 Hazard warning flasher switch
B9030 ABS front sensor	K9010 Load relief relay	S9450 Throttle butterfly switch
B9031 ABS rear sensor	K9020 Flasher unit	S9460 ABS button
B9040 Airflow meter	K9030 Horn relay	T9010 Ignition coil 1
B9050 Magnetic gate	K9040 Injection Relay	T9020 Ignition coil 2
E9000 Headlight	K9050 Bulb monitoring unit	T9030 Ignition coil 3
E9001 Low-beam headlight	K9060 ABS warning relay	V9000 Clock
E9002 High-beam headlight	K9070 ABS relay	X9000 Plug connection - engine wiring harness
E9010 Headlight	M9000 Starter motor	X9010 Plug connection - front indicators
E9020 Parking light	M9010 Fuel pump	X9020 Plug connection - rear section
E9030 Instrument lighting	M9020 Fan motor	X9040 Plug connection - oil pressure gauge
G9000 Battery	N9000 Thermostat	X9050 Plug connection - special equipment
G9010 Alternator	P9000 Speedometer	X9060 Plug connection - alarm system
H9000 Battery charge warning light	P9010 Revolution counter	X9070 Plug connection - ABS diagnosis
H9010 Oil pressure warning light	S9000 Ignition switch	X9080 Plug connection - heated handlebar grips
H9030 Front left flashing turn indicator	S9100 Combined switch, left	X9100 Plug connection - auxiliary instruments
H9041 Turn indicator repeater, right	S9110 High-beam headlight	X9999 Earth (ground) connection
H9042 Turn indicator repeater, left	S9121 Turn indicator switch, left	Y9001 Valve 1
H9050 Brake light	S9130 Horn switch	Y9002 Valve 2
H9060 Neutral telltale	S9200 Combined switch, right	Y9003 Valve 3
H9070 Choke telltale	S9210 Light switch	Y9010 ABS pressure modulator, front
H9080 Fuel level telltale	S9220 Turn indicator switch, right	Y9020 ABS pressure modulator, rear
H9090 Bulb telltale	S9230 Kill switch	
H9100 ABS telltale	S9235 Turn indicator cancel switch	

K75 ABS Fuse Block

Switched
Unswitched

#	FROM	Wire In	Fuse	Wire Out	TO
1	Kill Switch (from ign GRN) <i>Also from ignition switch GRN:</i> <i>FI Relay</i> <i>Coils</i> <i>ABS Control Unit</i> <i>ABS Sensors</i> <i>ABS Warn Relay</i> <i>Load Shed Relay 86</i>	Grn/Yel	7.5 Switched	Grn/Blk	Front Brake Switch Rear Brake Switch Clutch Switch Instrument Cluster Bulb Monitor Unit Heated Grips Aux Instruments Connector Spec Equip (Radio) Connector
2	Ignition Switch	Gray	7.5 Switched	Gra/Wht	Bulb Monitor Unit Parking Light
3	Battery	Red	15 Unswitched	Red/Wht	Instrument Cluster Clock Flasher Relay
4	Battery	Red	15 Unswitched	Red/Gra	Power Socket
5	Battery	Red	15 Unswitched	Red/Yel	Alarm Connector Spec Equip (Radio) Connector
6	Fuel Injection Relay (87)	Grn/Red	7.5 Switched	Grn/Wht	Fuel Pump Thermo Relay
7	Load Shed Relay (30)	Grn/Blu	15 Switched	Grn/Brn	Flasher Relay Horn Relay Alarm Connector Thermo Relay (to fan)